



152 Robbins Rd, Downingtown, PA, 19335, USA - [HuddleCamHD.com](http://HuddleCamHD.com) | 1 800 - 486-5276

# HuddleCam-HD™ 3X

USB PTZ Camera Manual

Please read this Manual before setting up and using the camera to ensure it's best performance.

[www.HuddleCamHD.com](http://www.HuddleCamHD.com)

Providing USB Video Conferencing Solutions for the 21<sup>st</sup> Century





152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

## Precautions.....

## Safety Tips.....

- Please read this manual carefully before using the camera.
- Avoid damage from stress, violent vibration or liquid intrusion during transportation, storage or installation.
- Take care of the camera during installation to prevent damage to the camera case, ports, lens or PTZ mechanism.
- Do not apply excessive voltage. (Use only the specified voltage.) Otherwise, you may experience electrical shock.
- Keep the camera away from strong electromagnetic sources.
- Do not aim the camera at bright light sources (e.g. bright lights, the sun, etc.) for extended periods of time.
- Do not clean the camera with any active chemicals or corrosive detergents.
- Do not disassemble the camera or any of the camera's components. If problems arise, please contact your authorized dealer.
- After long term operation, moving components can wear down. Contact your authorized dealer for repair.

## Supplied Accessories.....

- 3x Zoom USB 2.0 HD Video Conference Camera (1)
- 12V/2.0A DC Power Adapter (1)
- Tripod Mounting System (1)
- USB 2.0 Data Lines (3m), Serial Control Line, RS-232C to RS-485 Cable



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

- IR Remote Controller
- Control Cable (1)
- User Manual (1)

## Rear Board Connectors.....

High Definition Interface:	USB 2.0
Control Signal Interface:	mini DIN-8 (VISCA IN, VISCA OUT/RS485)
Control Signal Configuration:	Dip-Switch Pin 7/TTL Signal; Baud Rate: 9600bps
Power Supply Interface:	DC 12V Socket

## Electrical.....

Power Supply Adapter:	12V DC/2A
Input Voltage:	12V DC (10.5-14V DC)
Input Power:	24W (MAX)

## Structure.....

Material:	Aluminum, Plastic
Dimensions (W x H x D):	4.88 in. (123.952mm) x 5.75 in. (146.05mm) x 4.75 in. (120.65mm)
Mass:	1.46 lbs. (0.67kg.)
Working Environment:	Indoor
Operating Temperature:	32°F (-0°C) to 113°F (+45°C)
Storage Temperature:	-14°F (-10°C) to 140°F (+60°C)
Color:	Silver, Black, White


## Rear Board & Function.....

### 1. Front View.....



- 1. Lens**  
10x Optical Zoom.
- 2. IR Receiver**  
To receive IR remote controller signal.
- 3. Power LED**  
Blue LED blinks when unit is powered, Orange LED blinks for Stand-By status.
- 4. IR Receiver**  
To receive IR remote controller signal.

## 2. Rear View.....

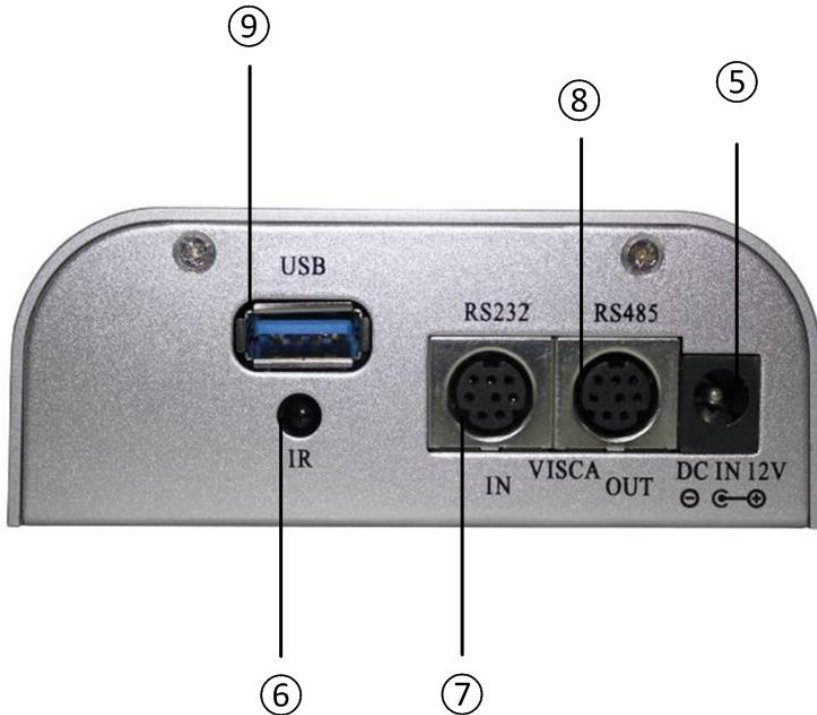

### 5. DC IN 12V Socket

Only use the Power Adapter supplied with this camera.

### 6. IR Receiver

To receive IR remote controller signals.

### 7. VISCA IN Port

For hard wired remote control from a 3<sup>rd</sup> party PC, joystick, etc...


### 8. VISCA Out Port/RS485

Used for daisy chaining multiple cameras for RS-232 RS-485 control.

### 9. USB 2.0 Interface

For connection to PC (USB 2.0 port. Will also function in a USB 3.0 port as USB 2.0 device).

### 3. Bottom View.....

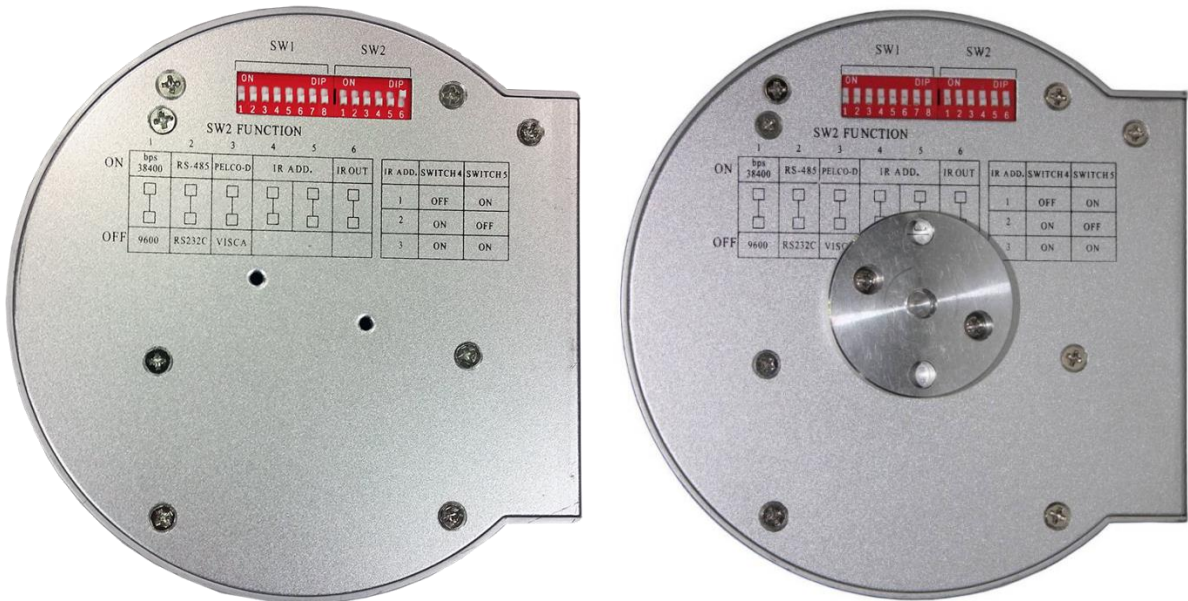

#### 1. Tripod


Will accept 1/4-20 bolt from 3<sup>rd</sup> party tripod, wall or ceiling mount using included tripod adapter.

#### 2. Dip-Switches

Used for selecting serial and IR communications settings.

## 4. Dip-Switch Settings.....

Note: When changing Dip-Switch settings, make all changes with camera powered off.

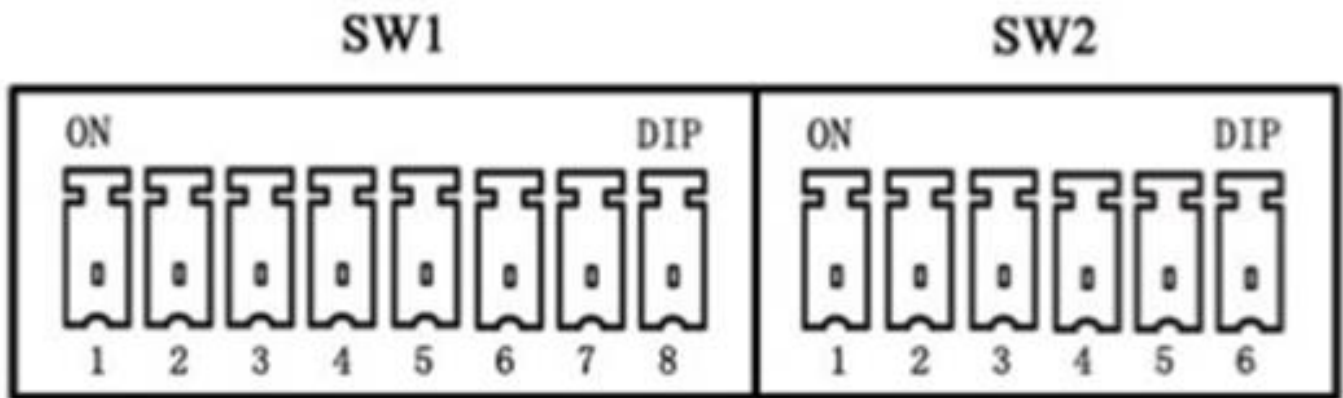

SW1: Used for setting RS232 address.

Address	SW1 Switch State 1-7, (8 for stand-by)						
	DIP-1	DIP-2	DIP-3	DIP-4	DIP-5	DIP-6	DIP-7
1	ON	OFF	OFF	OFF	OFF	OFF	OFF
2	OFF	ON	OFF	OFF	OFF	OFF	OFF
3	OFF	OFF	ON	OFF	OFF	OFF	OFF
4	OFF	OFF	OFF	ON	OFF	OFF	OFF
5	OFF	OFF	OFF	OFF	ON	OFF	OFF
6	OFF	OFF	OFF	OFF	OFF	ON	OFF
7	OFF	OFF	OFF	OFF	OFF	OFF	ON

Notes:

1. Broadcast address: If the Joystick is 255 (all dip switches on), any Camera can be controlled by any address.
2. Test Address: If the dome camera address is 0 (all dip switches off), any address



**HuddleCamHD**

152 Robbins Rd, Downingtown, PA, 19335, USA - [HuddleCamHD.com](http://HuddleCamHD.com) | 1 800 - 486-5276

code can control the dome camera.

**SW2:** Used for communication settings.

**SW2 DIP-1,2,3:** Baud Rate, Communication Protocol

Baud Rate	SW2 DIP-1	Communication Mode	SW2 DIP-2	Communication Protocol	SW2 DIP-3
9600bps	OFF (Def)	RS-232	OFF (Def)	VISCA	OFF (Def)
38400bps	ON	RS-485	ON	PELCO-D	ON

**SW2 DIP-4,5:** IR Remote Control Receiving Address Table

IR Remote Address	SW2 Switch State (4-5)	
	DIP-4	DIP-5
0	OFF (Def)	OFF (Def)
1	OFF	ON
2	ON	OFF
3	ON	ON

**SW2 DIP-6:** IR Output


IR Out	SW2 DIP-6
Disabled	OFF (Def)
Enabled	ON



[Cable Connection Info.....](#)

[VISCA RS-232C - IN Reference.....](#)


VISCA RS-232C IN

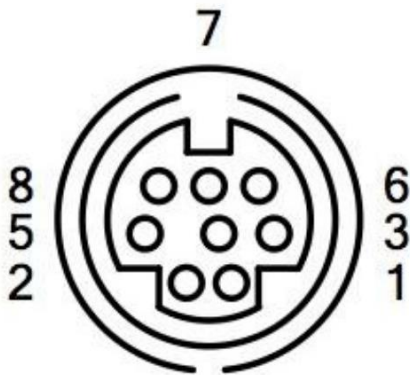

Pin S/N	Function
1	DTR IN
2	DSR IN
3	TXD IN
4	GND
5	RXD IN
6	GND
7	IR Commander Signal OUTPUT
8	NO Connection

[VISCA RS-232C - Out Reference.....](#)

VISCA RS-232C OUT

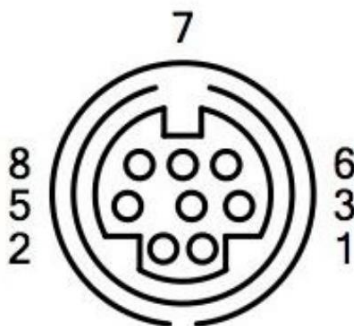

Pin S/N	Function	
	RS-232	RS-485
1	DTR OUT	TX+
2	DSR OUT	TX-
3	TXD OUT	
4	GND	
5	RXD OUT	
6	GND	
7		RS-485 -
8		RS-485 +



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

## OSD MENU.....

!!!!!(Menu does not currently work with the HuddleCam-HD™ 3x)!!!!

The following OSD Menu information is only included in the event that future firmware versions include full menu access. Please use the Rev button on the remote control for flipping image for ceiling mount.

On Screen Display Menu - Use the OSD menu to access and change the camera's settings.

**Note:** You cannot manually move the camera (pan/tilt) when the OSD menu is visible on the screen.

The Dome OSD Menu is as follows: (not applicable, see note above)

- Pan Speed Default Value: 20  
Set speed of Pan motor - Range = 1 - 63
- Tilt Speed Default Value: 20  
Set speed of Pan motor - Range = 1 - 63
- Scan Speed (Auto Pan Mode) Default Value: 6  
Set speed of boundary scan - Range = 1 - 63
- Tour Path (uses presets) Default Value: 1  
Select desired tour path - Range = 1 - 4
- Tour Dwell Default Value: 5  
Set duration to dwell on each preset - Range = 1 - 60
- Proportion Default Value: On  
Set Proportion - Range = On - Off
- Auto Rev Default Value: P  
Set camera mounting orientation - N for inverted ceiling mount



152 Robbins Rd, Downingtown, PA, 19335, USA - [HuddleCamHD.com](http://HuddleCamHD.com) | 1 800 - 486-5276

**Frame** Default Value: 60Hz  
Set Refresh Rate - Range = 50Hz or 60 Hz  
The Lens OSD Menu is as follows: (not applicable, see note above)

**DISPLAY** Default Value: Off  
On Screen Display = On or Off

**SHARPNESS** Default Value: Low  
Level of Sharpness:  
Low/Normal/High

**SATURATION** Default Value: Normal  
Level of Saturation  
Low/Normal/High

**NR (Noise Reduction)** Default Value: 3  
Adjustable Value: 0-5

**WB (White Balance)** Default Value: Auto  
Auto/Manual/Outdoor/Indoor/One Push/ATW  
(Manual Settings):

**R GAIN (Red Gain)** Default Value: 206  
Adjustable Scope: 0-255

**B GAIN (Blue Gain)** Default Value: 150  
Adjustable Scope: 0-255

**AE (Auto Exposure)** Default Value: Auto  
Auto/Manual  
(Manual Settings):

**SHUTTER** Default Value: 1/1  
Shutter Speed Range: 1/1-1/10000

**IRIS** Default Value: Close  
Close/F1.4-f22



152 Robbins Rd, Downingtown, PA, 19335, USA - [HuddleCamHD.com](http://HuddleCamHD.com) | 1 800 - 486-5276




**BRIGHT**  
Set Brightness 0 - 31

Default Value: 0



## IR Remote Controller (Note: Some buttons do not operate for all camera models)

1. **Reset:**  
Restarts the camera and restores it to Factory Default settings.  
(Note: Will delete all memory).
2. **Camera Selection**  
Select Camera ID: 1, 2 or 3
3. **Preset Positions**  
1-9: Preset Positions  
Set: Setting Preset Position  
Clear: Clear Preset Position  
Call: Call Preset Position  
**Note:** If you want to set (or call) the first preset position to 1, you should press number key "1", then press "Set" (or "Call") to set (call) the position.
4. **Fast Zoom in/out Control Zone**  
+: Zoom in quickly  
-: Zoom out quickly
5. **Pan/Tilt Controller**  
  - ↑ Move Up
  - ↓ Move Down
  - ← Move Left
  - Move Right
  - ↺ Auto Pan
6. **Additional Function Zone**  
Freeze: Image Freeze  
BL: Back-light Compensation  
WB: White Balance  
AE: Auto Exposure  
D Zoom: Digital Zoom  
HDMI: Swap to HDMI video output  
DVI: Swap to DVI video output  
Format: Swap between different formats
7. **Power Supply Switch**  
Switch for turning camera on (i.e. Stand-By mode vs. Working mode)
8. **OSD Menu Zone**  
Dome OSD: Enter Pan Tilt Zoom OSD menu  
Lens OSD: Enter lens OSD menu
9. **Slow Zoom In/Out Zone**  
+: Zoom in slowly  
-: Zoom out slowly
10. **Focus Control Zone**  
Auto: Turn on auto focus  
Manual: Turn on manual focus  
Far: Set focus at farther distance  
Near: Set focus at nearer distance

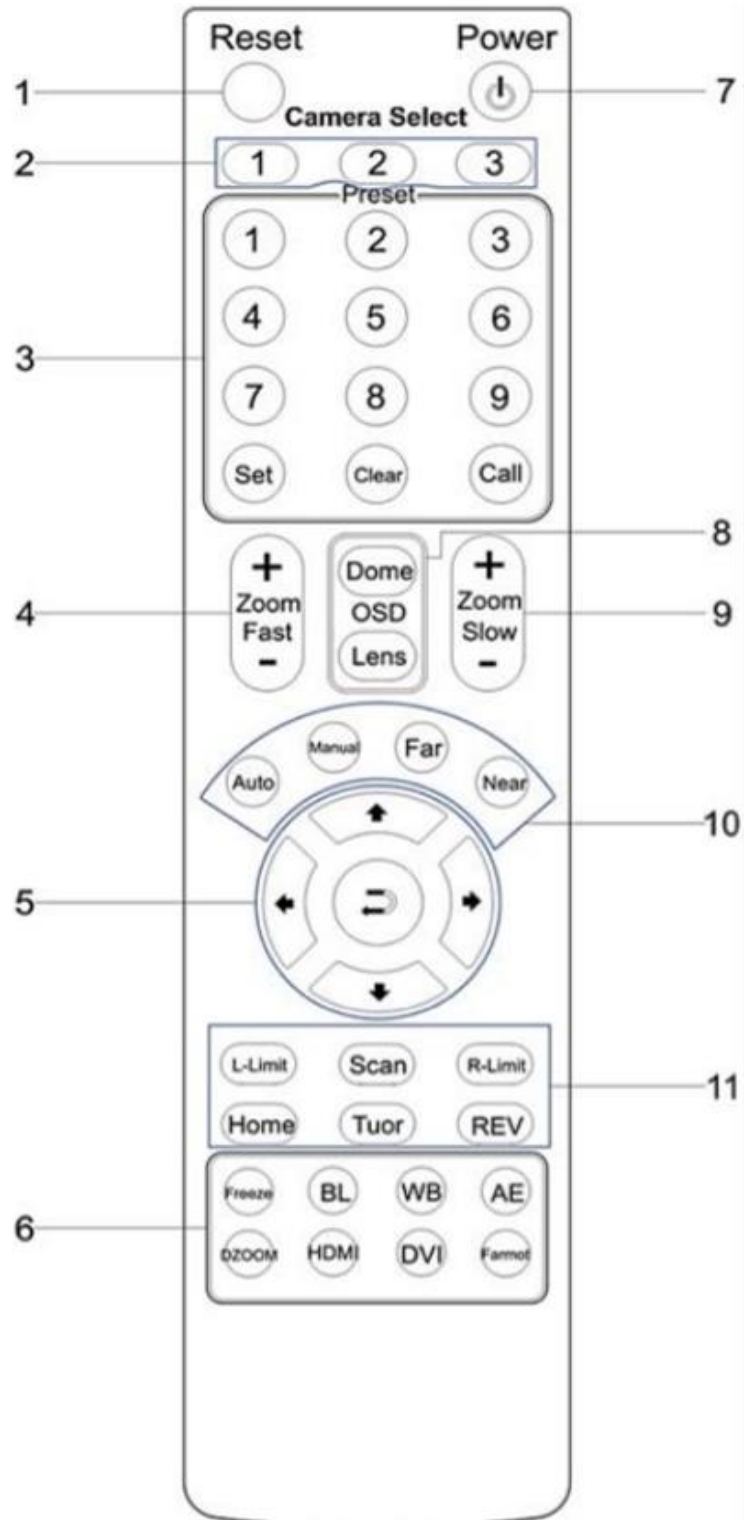



152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

- 11. **Pan/Tilt Function Zone**
  - L-Limit: Set left boundary limit scanning position
  - Scan: Enable Boundary Scanning (Auto Panning)
  - R-Limit: Set right boundary limit scanning position
  - Home: Go to camera's Home position
  - Tour: Enable automatic patrol tour of presets
  - Rev: Enable image flip for ceiling mounting

## Connection Instructions.....

1. Connect included Power Supply to the camera.
2. Wait for camera to come to Home Position.
3. Connect included USB 2.0 cable to camera and USB 2.0 port of PC.
4. Select and configure camera in your software of choice.

**NOTE:** Failure to follow this sequence may result in no connection to PC.

## Care Of The Unit.....

Remove dust or dirt on the surface of the lens with a blower (commercially available).




152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

## Installation Instructions.....

### Desktop Installation.....

When using the HuddleCam™ on a desk, Make sure that it will stand level. If you want to use the camera on an incline, make sure the angle is less than 15 degrees to ensure that the camera's pan and tilt mechanism operates normally.

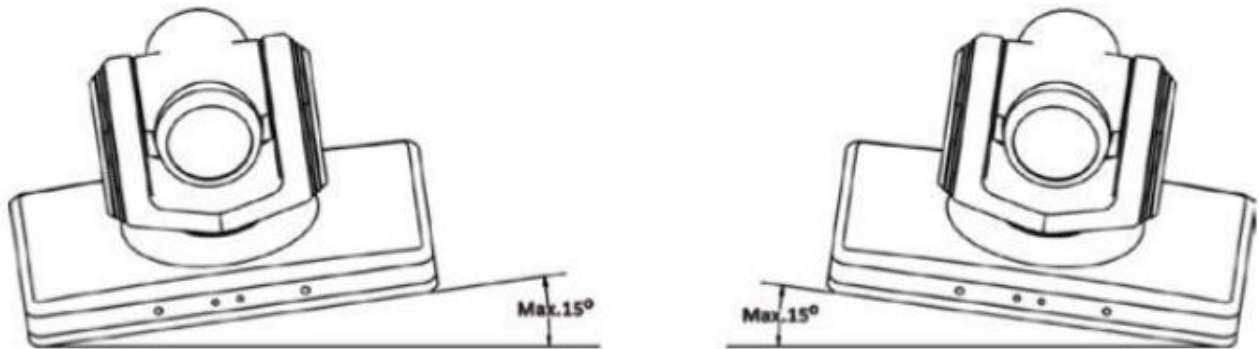

### Tripod Installation.....


When using the HuddleCam™ with a tripod, screw the tripod to the bottom of the camera. The tripod screw must fit below specifications:

**Note:** Tripod must stand on a level surface.



152 Robbins Rd, Downingtown, PA, 19335, USA - [HuddleCamHD.com](http://HuddleCamHD.com) | 1 800 - 486-5276

To fix the tripod mount to the bottom of the camera, use the supplied screws to hold it in place.

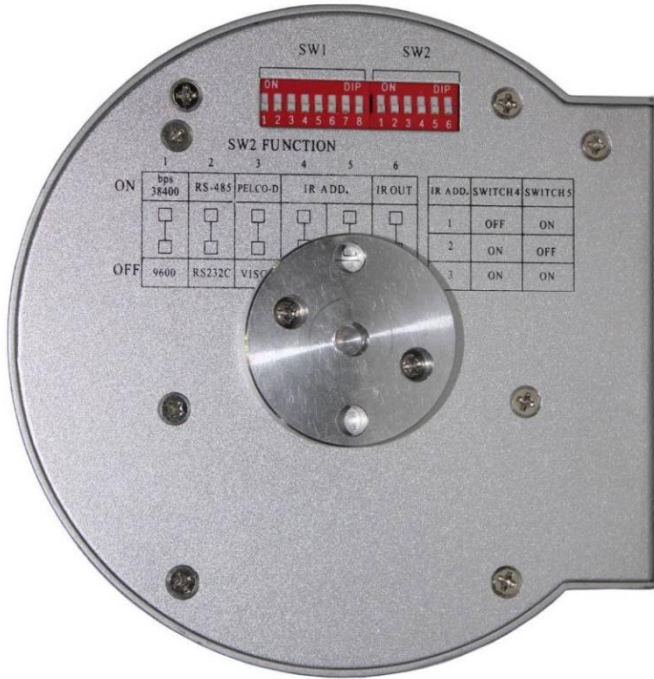

Then screw the tripod to the tripod bracket.







152 Robbins Rd, Downingtown, PA, 19335, USA - HuddleCamHD.com | 1 800 - 486-5276

[Troubleshooting.....](#)

Problem	Cause	Resolution
There is no power to the camera.	Power adapter is disconnected from mains or from camera.	Check the connections between the camera, power adapter and mains. If anything is disconnected, reconnect it.
Camera will not connect to the PC via USB.	USB cable is bad.	Try new USB Cable
	Camera connects sometimes.	Connect USB only after camera has completely booted.
Camera unable to pan, tilt, and/or zoom.	Menu is currently displayed on the screen.	Retry after exiting the menu.
	Pan, tilt or zoom range limit was reached.	Try to pan/tilt/zoom in the other direction.
Remote control not working.	The “camera select” button on the remote control is not set to match the “IR address” set on the camera dip switch.	Choose the correct “IR select” number to match camera settings.
Camera cannot be controlled via VISCA.	The connection between the PC and camera is incorrect.	Refer to Cable Connection Info section of this manual.
	Commands being sent are incorrect.	Refer to VISCA manual.
The Camera is not working at all.	No response or image from camera.	Disconnect power, and wait a few minutes, then connect the power again. Retry.



# HuddleCamHD



USB 2.0 | RS232 | Power

## Camera Technical Specifications:

**Resolution:** Full HD 1920x1080 30FPS

**Zoom:** 3X Optical Zoom

**Sensor:** 1/3" CMOS, 2.1 MegaPixel

**Field of View:** 45° Degrees

**Lens:** f = 5 -50 mm F2.0-2.8

**PTZ:** 359° Pan, 240° Tilt

**Video:** USB 2.0

**Control:** RS-232 Visca In/out

**Remote:** IR Remote w/ Fast/Slow PTZ Controls

**Presets:** 64 Presets

**Color:** Silver/Black/White

**Warranty:** 1 Year



**Priced at only \$399 you cannot beat the 1080p video and PTZ camera**